Eventide®

OMNIPRESSOR®
2830*Au



INSTRUCTION MANUAL

Eventide Inc
One Alsan Way
Little Ferry, NJ 07643 USA
1-201-641-1200
eventideaudio.com

Omnipressor Model 2830*Au User Manual
Version 1.0.1
P/N: 141392 Rev B

This User Manual is an updated version of the original Omnipressor instruction manual from 1974. Like the unit itself, the manual remains true to the original intent and application. References to tape machines, phone lines, etc. appear throughout.

Eventide is a registered trademark of Eventide Inc.
Omnipressor® is a registered trademark of Eventide Inc.
© 2025 Eventide Inc. All rights reserved.

OMNIPRESSOR MODEL 2830*Au

TABLE OF CONTENTS

SECTION 1 INTRODUCTION

General Description 1

Specifications 2

SECTION 2 CONNECTION AND OPERATION

Connection Instructions 3

Control and Indicator Description 4

Linking 7

Applications---Introduction 8

Application Notes

1. "Your Backwards Omnipressor" 10
2. Standard Operating Modes 12
3. Voltage Controlled Amplifier 13
4. Predictive Compression 14
5. Omnipressor As A Noise Reduction Unit 15

SECTION 3 TECHNICAL DATA

Block Diagram 17

Theory of Operation 18

Safety & Warranty 20

GENERAL DESCRIPTION




The 50th anniversary Model 2830*Au Omnipressor® is a professional-quality dynamic modifier, combining the characteristics of a compressor, expander, noise gate, and limiter in one convenient package. Its dynamic reversal feature makes high-level input signals lower than corresponding low-level inputs. Musically, this reverses the attack-decay envelope of plucked strings, drums, and similar instruments and gives the effect of “talking backward” when applied to a voice signal. When a return to normalcy is desired, the LINE switch is used to bypass the Omnipressor.

The Omnipressor provides an unusually wide range of controls, useful in all program-controlled gain changes. The continuously variable Expansion/Compression control goes from an expansion range of 10 to 1 (gate) to a compression range of −10:1 (abrupt reversal); attenuation and gain limit controls adjust the gain control range from a full 60dB to as little as plus and minus 1dB; and variable time constant controls adjust attack/decay times over an approximate 1000 to 1 ratio. The unit’s bass-cut switch limits low-frequency response in the level detector.

The Omnipressor’s unique metering system employs a logarithmic amplifier to generate information on Input, Output, and Gain. Some of the unusual capabilities of the unit are illustrated on the graph below.

OMNIPRESSOR CAPABILITIES

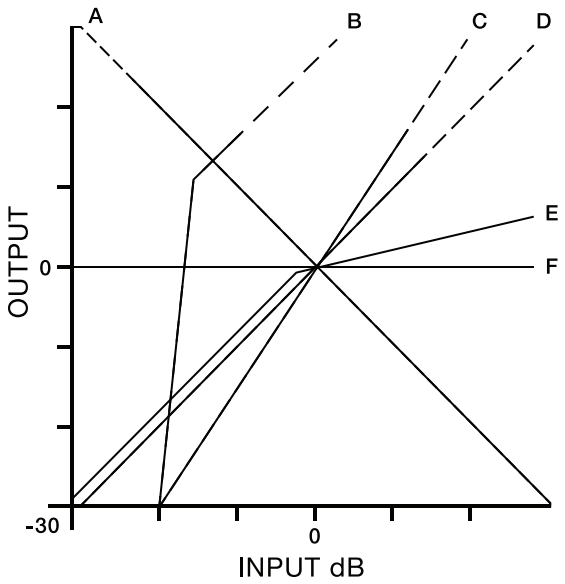

A: DYNAMIC REVERSAL An input level of +10 results in an output of −10. An input level of −10 results in an output of +10.

B: GATE As the signal decreases below +10, the device gain rapidly goes to minimum.

C: EXPANSION A 40dB input range results in a 60dB output range.

D: CONTROL CENTERED Input level equals output level.

E: LIMITING Gain is unity until input is 0dB. Above 0dB. A 30dB change in input produces a 6dB output change. (Line is offset for clarity.)

F: INFINITE COMPRESSION Output level remains unchanged regardless of input level.

SPECIFICATIONS

INPUT LEVEL	0 to +8dB nominal level. Threshold control provided to center gain control operation over range of −25 to +15dB. Maximum level should not exceed +20dB or clipping will occur.
INPUT IMPEDANCE	25 kOhms, transformer-coupled.
OUTPUT LEVEL	0 to +8dB nominal level. Maximum level before clipping is +18dB. Output level control may be used to compensate for extremes of gain reduction.
OUTPUT IMPEDANCE	80 Ohms, transformer-coupled.
FREQUENCY RESPONSE	+0, −½dB 20Hz-16kHz; +0, −1dB 15Hz-20kHz.
GAIN	AGC disabled: Unity, −12dB to +12dB depending upon OUTPUT level.
COMPRESSION	Continuously variable from 1:1 through ∞ through −10:1.
EXPANSION	Continuously variable from 1:1 through 10:1.
GAIN LINEARITY	Infinite compression setting gives constant output level ±1dB for 60dB change in input level.
FUNCTION CONTROL	Continuously variable function knob is used to set appropriate compression/expansion ratio. Control operates parabolically to give spread near center. Common settings are calibrated.
LIMIT CONTROLS	The ATTEN LIMIT and GAIN LIMIT controls serve to restrict the gain control range to any value between 0 and 30dB in each direction.
DISTORTION	AGC DISABLED: .05% between 20Hz and 20kHz. Typ. .02% at 1kHz. −20dB AGC, +20dB output gain: Less than 1% above 100Hz, .5% at 1kHz.
SIGNAL/NOISE	At unity gain, output noise level is below −90dB.
METERING	Front panel meter provided which measures either absolute input level, absolute output level, or gain on linear/log scale over 60dB.
TIME CONSTANT	DEFINITION: Numbers refer to the time required for the Omnipressor to change gain by 10dB in response to an input step change of 10dB in infinite compression mode. ATTACK TIME: Continuously variable from 100µs through 100ms. RELEASE TIME: Continuously variable from 1ms through 1 second.
POWER REQUIRED	115V AC, 50-60 Hz ±12% or 230V AC, 50-60Hz ±12%; nominal 10 watts.
DIMENSIONS	19in (48.26cm) wide; 3.5in (8.89cm) high; 9in (22.86cm) deep.

OMNIPRESSOR INTERFACE



The Omnipressor line inputs and outputs are transformer balanced, while the side chain I/O is active balanced or unbalanced.

LINE IN	Transformer isolated, balanced or unbalanced +4dBu line input. Accepts XLR or TRS connection (only one should be connected).
LINE OUT	Transformer isolated, balanced or unbalanced +4dBu line output. Accepts XLR or TRS connection (only one should be connected).
SIDE CHAIN IN/OUT	Active balanced/unbalanced +4dBu side chain input and output on XLR or TRS connectors (only one should be connected).
LINK IN/OUT	Link multiple units in stereo or multi-mono setup using standard TS or TRS patch cables. (See Linking section.)

CONTROL AND INDICATOR DESCRIPTION

CONTROLS

LINE — This control switches the Omnipressor in and out of an audio circuit. When the switch is in the DOWN position (LED off) the unit is completely relay-bypassed.

INPUT LEVEL — This control adjusts the input audio to both the gain control circuit and the level detector (except when the side chain is used). Note that this will have a direct effect on the threshold level.

MIX — This controls the mix of dry and processed signals for parallel compression effects. Turn this control fully CCW for 100% dry signal and fully CW for 100% wet signal.

SIDE CHAIN — This switch enables the external sidechain (if connected). When the switch is in the DOWN position (LED off) the sidechain path is disabled and the level detector recieves its signal from the input signal. When the switch is in the UP position (LED on) the sidechain path is enabled and the level detector gets its signal from the external sidechain input.

INPUT THRESHOLD — This control determines the operating point of the Omnipressor. The threshold set on this control is the “crossover” point for the gain control voltage. For example, if the unit is set in a compression mode, an input signal below the threshold will have its amplitude increased, and an input signal above the threshold will have its amplitude reduced.

BASS CUT — This switch determines the frequency response of the level detector circuit. In the DOWN position (LED off) the level detector has the same frequency response as the gain control section. In the UP position (LED on), bass signals are attenuated and have relatively less effect on the overall compression/expansion operation of the Omnipressor.

ATTACK TIME — This control varies the time the Omnipressor requires to respond to a change in signal input level. Assuming a 10dB step increment in input level, the attack time as set on the control is numerically equal to the time required for the level detector to reach its final state with respect to the new input level.

RELEASE TIME — This control varies the time the Omnipressor requires to respond to a decrease in signal input level. Assuming a 10dB step decrement, the release time as set on the control is numerically equal to the time required for the level detector to reach its final state with respect to the new input level.

METER FUNCTION — This three-position switch controls the function of the meter. It has no effect on the signal processing of the Omnipressor. In the INPUT position, the meter reads the input signal level applied to the unit. In the GAIN position, the meter reads the relative gain of the Omnipressor and so gives an indication of the operation of the gain control function. In the OUTPUT position, the meter reads the output level of the Omnipressor. All level readings are in dBu.

FUNCTION (Compress/Expand) — This is the main control on the Omnipressor. It determines the unit's basic mode of operation. Fully counterclockwise, the Omnipressor gain varies sharply from full attenuation to maximum gain as a threshold level is exceeded. As the control is rotated clockwise, this action becomes less sharp until the gain varies only a few dB from no input to full input. At the center divider, the Omnipressor gain is constant regardless of input level. As the control is turned clockwise from the center divider, the gain begins decreasing with increasing input level. For small compression ratios, the gain will vary only a few dB for large input changes. More rotation produces substantial compression, until the point of infinite compression is reached and the gain decreases 1dB for each dB of signal increase, thus keeping the output level constant regardless of input. Rotation past this point produces dynamic reversal, in which a high-level input produces a lower-level output than does a low-level input. Fully clockwise rotation results in full output attenuation above a certain threshold Input.

OUTPUT LEVEL — This control increases or decreases the output level by ±12dB. This can be used as a make-up gain control or simply to adjust overall level. This control has no effect on compression ratio or other operating parameters. It is equivalent to adding a simple amplifier after the unit.

ATTEN LIMIT — This control limits the maximum attenuation of the Omnipressor. In its fully counterclockwise position, 30dB of gain reduction is available. Fully clockwise, maximum attenuation will be about 1dB. ATTEN LIMIT overrides the FUNCTION control.

GAIN LIMIT — This control limits the maximum gain of the Omnipressor. In its fully counterclockwise position, 30dB of gain is available. Fully clockwise, maximum gain will be about 1dB. This control overrides the action of the FUNCTION control.

LINK — This switch enables unit-unit linking. In the DOWN position (LED off) linking is disabled. In the UP position (LED on) linking is enabled.(See Linking section.)

POWER ON/OFF — Applies power to the Omnipressor.

CONTROL AND INDICATOR DESCRIPTION (cont.)

INDICATORS

LINE (red LED)	Becomes illuminated when the LINE switch is UP, indicating that the Omnipressor is in-circuit.
ATTEN (green LED)	Shows that the Omnipressor is operating in the gain-reduction mode. Relative brightness indicates amount of gain reduction. Operation is instantaneous, so that peak limiting is indicated even if the meter has no time to respond.
GAIN (red LED)	Shows that the Omnipressor is operating in the gain-increase mode. Relative brightness indicates the amount of gain increase. Operation is instantaneous, so that short increases are indicated even if the meter has no time to respond.
METER	The METER is calibrated over a 60dB range in a linear/logarithmic fashion, so that each 10dB takes up an identical space on the scale. Center scale corresponds to an input level of 0dB, a gain of unity, and an output level of 0dB, depending upon the setting of the METER FUNCTION switch described earlier. The red arc occupying the upper 12dB of the scale applies in the output metering function, at which time it serves to warn that the output amplifier is clipping.

LINKING

STEREO MODE LINKING (default)

In stereo mode all linked units follow the one with the most attenuation. This is typically used in stereo, two-unit, configurations in order to maintain a stereo image, but any number of units can be linked. Only units that have their LINK switch enabled will participate.

To enable stereo mode linking, move the four internal link-mode jumpers to the ST LINK position. These are found on the backside of the front panel after removing the top cover. This is the default mode as shipped from the factory.

MASTER MODE LINKING

In master mode all linked units follow the master unit's gain. This allows a single level detector (on the master unit) to control multiple channels of audio (on the slave units). In master mode, units with their LINK switch enabled will act as slave units, while all units with their LINK switch disabled will act as masters to all down-stream slave units (until the next master unit).


To enable master mode linking, move the four internal link-mode jumpers to the MTR LINK position. These are found on the backside of the front panel after removing the top cover.

VCA MODE

A single unit configured in master mode with its LINK switch enabled, will function as a high-quality voltage controlled amplifier (VCA). In this mode, a control signal is fed into the LINK IN jack to control the VCA directly (See Application Note #3 for details).

CONNECTIONS

In stereo and master linking modes, units should be daisy-chained in a loop, LINK-OUT to LINK-IN, as shown below. Standard TS or TRS audio patch cables may be used.

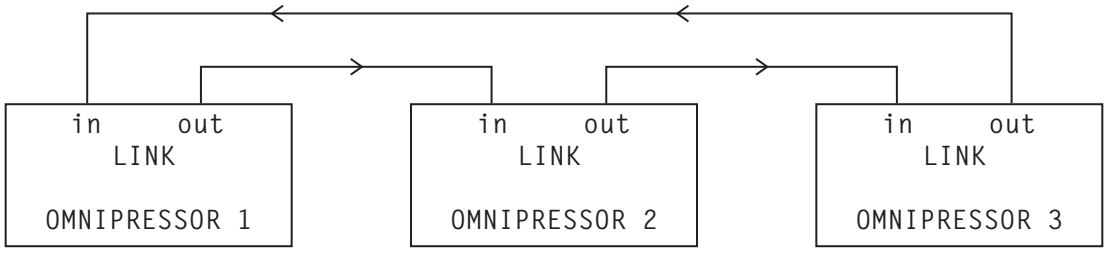

MULTI-UNIT LINKING---BLOCK DIAGRAM

APPLICATIONS

YOUR OMNIPRESSOR LOVES YOU AND WANTS TO BE YOUR FRIEND!

If you don't understand it, if you don't fondle its controls properly, it will cause you hours of confusion, and tempt you to dash it on the rocks or put it in a sack and drown it. PLEASE READ this applications section before blaming your Omnipressor for malfeasance or deviltry.

The Omnipressor, like most Eventide equipment, is a signal processor with wide-ranging use. It is not the normal, tame limiter or compressor which only tries to keep signals within a certain range. It is not a simple noise gate which is either off, letting nothing through, or on, letting everything through at unity gain. Rather, it is a special effects unit, which, in addition to the above, can generate such effects as infinite compression, dynamic reversal, extreme expansion, etc. The Omnipressor has a 60dB control range in addition to a wide dynamic range at constant gain. Because of this wide range, it is possible to overload system components following the Omnipressor if it is used improperly. Note, for instance, that with the output control wide open, and with the gain reading +30 on the meter, it is possible to obtain up to 50dB gain from the unit. If you connected an amplifier with 50dB gain between your console out and your tape recorder in, you might reasonably expect some distortion, right? Right!

Before using the Omnipressor in a session or in a performance, familiarize yourself with its operation. The ATTEN and GAIN LIMIT controls serve to prevent uncontrolled operation by the novice user. Turn on the Omnipressor and turn the threshold control to zero. With no input, the level detector stage is producing the maximum possible control voltage. With no input, putting the FUNCTION knob in the expand section causes a great reduction in gain. As the input increases, the control voltage gets closer to 0, and the gain reduction decreases, until, at some point, set by the threshold control, the gain starts increasing past unity (0dB). This is expansion — increasing gain with increasing signal, thus increasing dynamic range. Note how sharply the FUNCTION control varies the gain with no input signal. Also note that as the signal level approaches the threshold, the function control has a less pronounced effect, until, at the threshold, full rotation has almost no effect.

Experiment with the two LIMIT controls. Again remove the input signal. Turn the two limit controls fully clockwise. Observe that the FUNCTION control can only vary the meter by a few dB, despite the fact that with no input, maximum expansion or compression should occur. Rotate the FUNCTION control to maximum expansion and vary the ATTEN LIMIT control. Notice that the meter varies from negative full scale to almost center scale. Now, rotate the GAIN LIMIT control. Note that this control has no effect on the meter reading. Turn the FUNCTION control to maximum compression and repeat the experiment with the LIMIT controls. Note that now the GAIN LIMIT varies the meter reading from center to positive full scale, and the ATTEN LIMIT control has no effect.

The LIMIT controls are very important in setting up the unit. They can prevent runaway gain, runaway attenuation, runaway engineer, and many other problems. For instance, if you wish to increase average program level by 10dB, but limit compression to a maximum of 15dB, set the GAIN LIMIT control with no input and the FUNCTION knob at full compress so that the meter reads +10 in the GAIN position. Now, turn the FUNCTION knob to full expand and set the meter at –5 with the ATTEN LIMIT control. You are now free to set the compression ratio, threshold, and time constant for the most pleasing performance without worrying that you will get too much gain, too much attenuation, or uncontrolled operation, regardless of signal levels or peaks. This type of setability is perfect for sound reinforcement or broadcast use where unattended operation is the rule and wild effects are not desired. Controllable compression in sound reinforcement is particularly advantageous because feedback can be prevented conclusively while still permitting maximum output.

Another control not customarily found on dynamic modifiers is the BASS CUT switch. Unlike the LIMIT controls, it is not exceptionally useful. Its main application is to prevent large gain variations from being initiated by low frequency signals. A typical use would be in communications or advertising applications, where it is frequently desirable to give a signal as much “punch” as possible. Information in voice signals is generally carried in the range above 500Hz, although fundamentals are present below this frequency. By using a short time constant and cutting bass response, an improvement in intelligibility can be obtained in listening environments with less than optimum signal-to-noise ratios. Additional applications would be in processing signal tracks with leakage present. If, for instance, the bass drum leaked onto the voice track which you are limiting, the bass can be prevented from affecting the gain control operation. (Note that this does not reduce the amplitude of the leakage. Refer to the Noise Gate description for more information on reducing leakage.)

The Model 2830*Au Omnipressor may be used as a fast peak limiter. By setting the ATTACK TIME constant control to 100µs, the unit in effect no longer is an RMS responding detector, but rather follows peaks in the input signal. At this rate a single half cycle of 5kHz tone above the threshold is sufficient to reduce the Omnipressor gain by about 10dB. Smaller peaks at even higher frequencies can be limited at this setting. Bear in mind that at very fast attack times, limiting is equivalent to clipping, and if the signal level is frequently above the threshold, harmonic distortion will be increased.

The above material gives general considerations for the operation of the Omnipressor. The remainder of this applications section is organized as a group of individual “application notes.” If you have a specific application that you wish to make known, please join our forum at eventideaudio.com.

APPLICATION NOTE #1
"Your Backwards Omnipressor"

As we state in our promotional literature, one of the novel features of the Omnipressor is its ability to make signals sound backward. This is a consequence of the Dynamic Reversal feature, which enables loud sounds to come out more softly than soft sounds. Speech waveforms, for instance, generally consist of loud peaks followed by trailing-off envelopes. By making these envelopes louder than the peaks, the illusion that the sound is coming out backward is generated. Likewise, drum sounds consist of peaks roughly coincident with mechanical impact, followed by a decay envelope. The Omnipressor amplifies this envelope and "swallows" the impact.

The reversal effect is not limited to voice and drums. In general. any material with wide dynamic range can be "reversed." Plucked string instruments, virtually all percussion, and many natural sounds can be processed to good effect. Certain other material does not sound good in the reversal mode. Specifically, program material consisting of more than one type of sound will give inconsistent results at best. Trying to process an entire program source rather than individual tracks will generally meet with ignominious failure, although solos can be picked out and reversed on occasion.

CONTROL SETTINGS

LINE	ON
FUNCTION	–2 COMPRESS
ATTEN/GAIN LIMIT	FULL CCW
TIME CONSTANT	ATTACK 5ms, RELEASE 100ms
THRESHOLD	0
OUTPUT	0
METER	GAIN

Experiment with the operational controls to obtain the most pleasing effect. It will probably be desirable to limit the maximum gain somewhat with the GAIN LIMIT control to prevent high noise levels with no signal. This applies particularly to taped material in which noise reduction was not employed.

ADDITIONAL POSSIBILITIES

If you can make forward things sound backward, you should be able to make backward things sound forward! Play a vocal tape backward and reverse the dynamics. The voice should come out sounding almost normal, but the words will be pure gibberish. If you want tremendous "punch" on recorded material, record it normally, and then play it backward through the Omnipressor set barely into the reversal mode, and re-record it. Playing the second tape backward (i.e. voice forward), should result in a signal almost completely devoid of dynamic range. Also, you can use the second recording as an opportunity to add some echo, which will then precede the signal in real time. The reason backward compression is so effective is that the program material is devoid of sharp attack transients which tend to bring down the succeeding program material.

PRESENTING:

Eventide OMNIPRESSOR

INPUT LEVELS LARGE OR SMALL . . .






THE INFINITE COMPRESSOR

COME OUT ZERO LEVEL ALL . . . . .




A LIMITED INPUT DYNAMIC RANGE



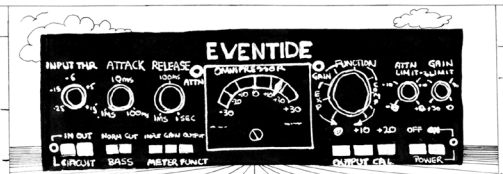



THE E-X-P-A-N-D-E-R

RESULTS IN WIDE OUTPUT RANGE

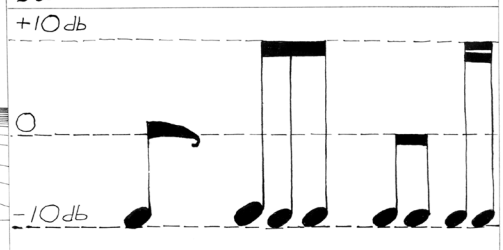


SET THRESHOLD AT LEVEL OF WATER

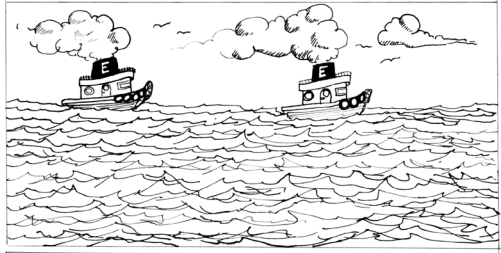

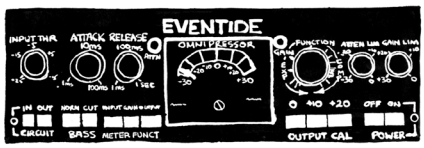

THE NOISE GATE

WATER PRESENT ONLY WHEN BOATS PRESENT

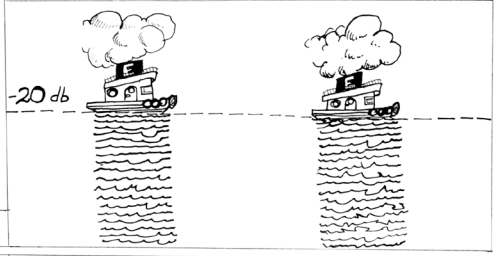


SET A MAXIMUM LEVEL . . . .






THE LIMITER


ABOVE MAX. LEVEL, NOTHING GETS THROUGH

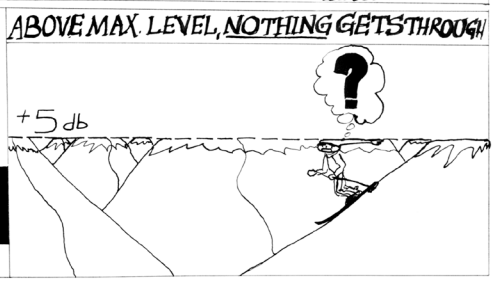

PUT A SMALL AND LARGE INPUT IN . . . .

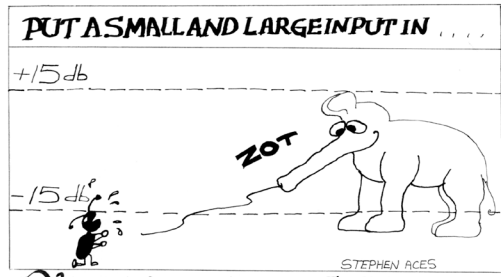


STEPHEN ACES

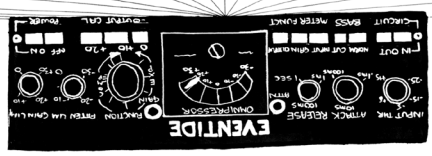

THE DYNAMIC REVERSER

GET A LARGE AND SMALL OUTPUT OUT

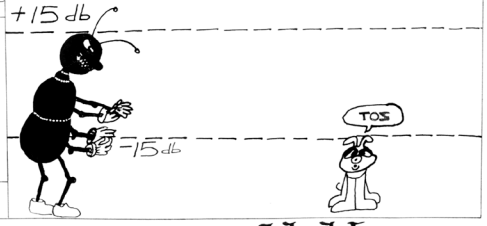

AND NOW! NEW FEATURES!

NOW THE OMNIPRESSOR IS AVAILABLE WITH INDEPENDENTLY VARIABLE ATTACK AND RELEASE TIMES; MICRO TO MILLI SECONDS! CATCH PEAKS, OR AVERAGE YOUR SIGNAL FOR TRUE R.M.S. LIMITING.

SEPARATELY VARIABLE ATTACK AND RELEASE TIMES! 1000:1 RATIOS! SEND FOR SPECS TODAY!!

AND: as an added bonus,

CALIBRATED EXTRA GAIN AT THE TOUCH OF A BUTTON, UP TO 20 db!

THE OMNIPRESSOR, FROM **Eventide**
265 WEST 54th ST. NYC 10019

APPLICATION NOTE #2

Our advertisement opposite depicts in cartoon form the various standard operating modes of the Omnipressor. This note gives the initial control settings to achieve the effects depicted. The following settings apply to all modes:

LINE.....ON BASS CUT.....OFF
TIME CONSTANT...ATTACK 5ms, RELEASE 100ms (except in GATE and LIMITER)
INPUT SIGNAL should be available 10-20dB over THRESHOLD setting.

	INFINITE COMPRESSOR
ATTEN/GAIN LIMIT	FULL CCW
METER	OUTPUT
FUNCTION	∞. Apply signal from oscillator and vary input amplitude. Adjust FUNCTION control slightly until varying input has no effect on output level.
	EXPANDER
ATTEN/GAIN LIMIT	FULL CCW
METER	GAIN
FUNCTION	AS DESIRED between 1 and 2. Use GAIN LIMIT if needed for wide expansion range.
	NOISE GATE
ATTEN LIMIT	CCW
GAIN LIMIT	FULL CW
METER	GAIN
FUNCTION	10 EXPAND
ATTACK TIME	100μs
RELEASE TIME	AS DESIRED
THRESHOLD	ADJUST FOR DESIRED GATING ACTION.
	LIMITER
ATTEN LIMIT	CCW
GAIN LIMIT	FULL CW
METER	GAIN
FUNCTION	∞
THRESHOLD	ADJUST FOR LEVEL AT WHICH LIMITING IS DESIRED.
	DYNAMIC REVERSER
ATTEN LIMIT	CCW
GAIN LIMIT	CCW
METER	GAIN
FUNCTION	−1

Best settings of all controls will greatly depend upon program material.

APPLICATION NOTE #3
VOLTAGE CONTROLLED AMPLIFIER

The Omnipressor may be used as a high-quality voltage controlled amplifier for modulation, electronic music, channel gain variation, amplitude scaling, filter generation, or, in fact, any application in which a fader or potentiometer is used. Characteristics in the voltage control mode include accurate voltage vs. amplitude curve, good tracking, low distortion regardless of signal level (below clipping level), and wide control range.

The gain control section of the Omnipressor has a linear control voltage vs. decibel output characteristic. This is equivalent to a logarithmic control voltage vs. output voltage curve. This makes it especially useful for audio and musical applications in which logarithmic response and logarithmic signal decay envelopes are prevalent. The control range available Is 60dB. Gain is decreased with a positive control voltage and increased with a negative control voltage.

To operate the Omnipressor in the VCA mode, set the four internal link-mode jumpers to the MTR LINK position. In this mode, the TS LINK_IN jack acts as a VCA input. (See LINKING section). Characteristics of the VCA section are as follows:


Input impedance nominal 18K ohms
Input voltage range +12 to −12V DC
Control characteristic .4 volts per decibel
Linearity ±1dB
Center: no input signal gives 0 gain ±1dB
Frequency response essentially flat to 10kHz
Gain slew rate approx. 1dB per microsecond

In the voltage control mode, the FUNCTION control and GAIN LIMIT and ATTEN LIMIT controls are disabled, as are the time constant controls and the BASS CUT. The INPUT, MIX and OUTPUT controls remain functional, and the METER and indicator lights operate.

The audio signal in the Omnipressor is theoretically “modulated” by the control voltage. However, due to the logarithmic characteristic of the control, and the unipolar nature of the control (reversing control polarity does not reverse output phase), it is recommended that the Omnipressor NOT be used as a balanced modulator (multiplicative mixer) except on an experimental basis.

APPLICATION NOTE #4
PREDICTIVE COMPRESSION

In a previous note, we discussed the possibility of compressing material in reverse order to eliminate the compressor's inherent problem with fast attack transients. In a limiter, fast transients are in effect eliminated by signal clipping before the system gain can adjust to the new level. In a normal compressor, short bursts of high level material can get through before the gain can adjust. The first method creates varying amounts of distortion. The second engenders such phenomena as "p popping." The unique ability of the Omnipressor to separate the gain control from the level detector enables one to build what is most conveniently termed a "predictive" compressor. Such a unit should go a long way towards eliminating the unavoidable imperfections standard units have.

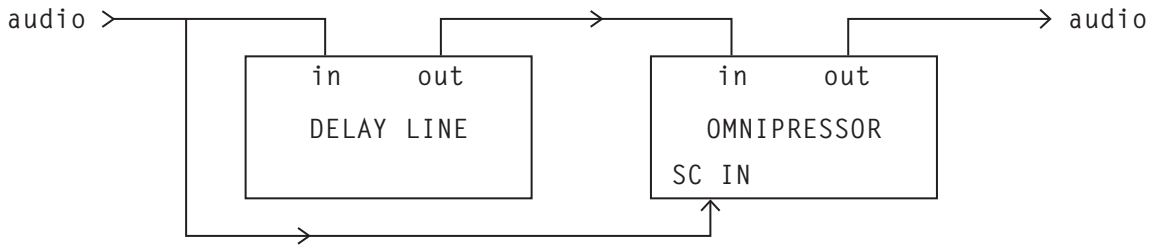

PREDICTIVE COMPRESSOR---BLOCK DIAGRAM

Connect an Omnipressor and an Eventide Digital Delay Line together as shown above. Enable the sidechain input. What you have just fabricated is a compressor that can read the future, or, in more common parlance, one which has a negative attack time. It works as follows: A signal comes into the level detector via the sidechain, which reacts to it depending upon the settings of the controls. Simultaneously, the signal is fed into the delay line which delays it by one or more milliseconds. The signal is then fed to the gain control section of the second Omnipressor. During this delay interval, the level detector has reached the optimum output voltage for the input signal, and before the time the signal reaches the gain control module, the gain has adjusted to the level of the signal.

This predictive mode of operation requires some experimentation to match the signal delay time to the Omnipressor time constant, but when the system is properly adjusted, a very close approximation to the "ideal compressor" is realized.

LIMITATIONS

This type of operation is particularly effective in applications in which only one signal must be processed. To maintain synchronism, a channel of delay is required for each channel of audio, whether or not that channel is to be otherwise processed. This would become cost prohibitive in any configuration exceeding stereo. There is much room for experimentation. We would be pleased to know of your results and techniques.

APPLICATION NOTE #5
USE OF THE OMNIPRESSOR AS A NOISE REDUCTION UNIT

The Omnipressor makes a good compression/expansion noise reduction unit for enhancing the transmission capability of some media such as tape, digital equipment, low grade phone lines, etc. While it will not replace a good noise reduction unit such as the DBX or the Dolby for tape (devices intended primarily for noise reduction applications have frequency response tailoring), it will serve in a pinch when one of these devices is not available.

If the Omnipressor is set up as a compressor on the input end (feeding the tape machine or phone line) and as an expander on the output end, then the input dynamic range is compressed during transmission and a medium with, say, 40dB dynamic range can appear to have a much wider range. If the input is compressed by a two to one range, and the output is expanded by a factor of 2 to 1, an apparent 80dB range exists for the transmission channel. In practice, this does not precisely obtain, but a very substantial audible improvement is possible with such processing. Since identical circuitry with identical time constants is used to produce compression and expansion, perfect dynamic tracking is obtained. If compression and expansion ratios are set properly, the system should be transparent to the listener.


	INITIAL SET UP
LINE	ON
THRESHOLD	−10
ATTACK TIME	5ms
RELEASE TIME	50ms
BASS CUT	OFF
METER FUNCTION	GAIN
OUTPUT CAL	0
ATTEN LIMIT	CCW
GAIN LIMIT	CCW

Set the FUNCTION control to a compression ratio of 2 for tape recording or sending signals on a transmission channel. Set the FUNCTION control to an expansion ratio of 2 to decode the compressed signal. To go from record to playback with a single Omnipressor, adjusting the FUNCTION control is the only required adjustment. If simultaneous encode and decode is required, be sure that both Omnipressors have identical front panel adjustments.

Only the basic setup is given above. You might wish to experiment with compression/expansion ratios. Also, with certain types of signals, it might be desirable to put the BASS CUT switch ON. Remember that the setup for encode and decode (compress and expand) should be identical except for the complementary setting of the FUNCTION control.

TECHNICAL DATA

OMNIPRESSOR MODEL 2830*AU BLOCK DIAGRAM

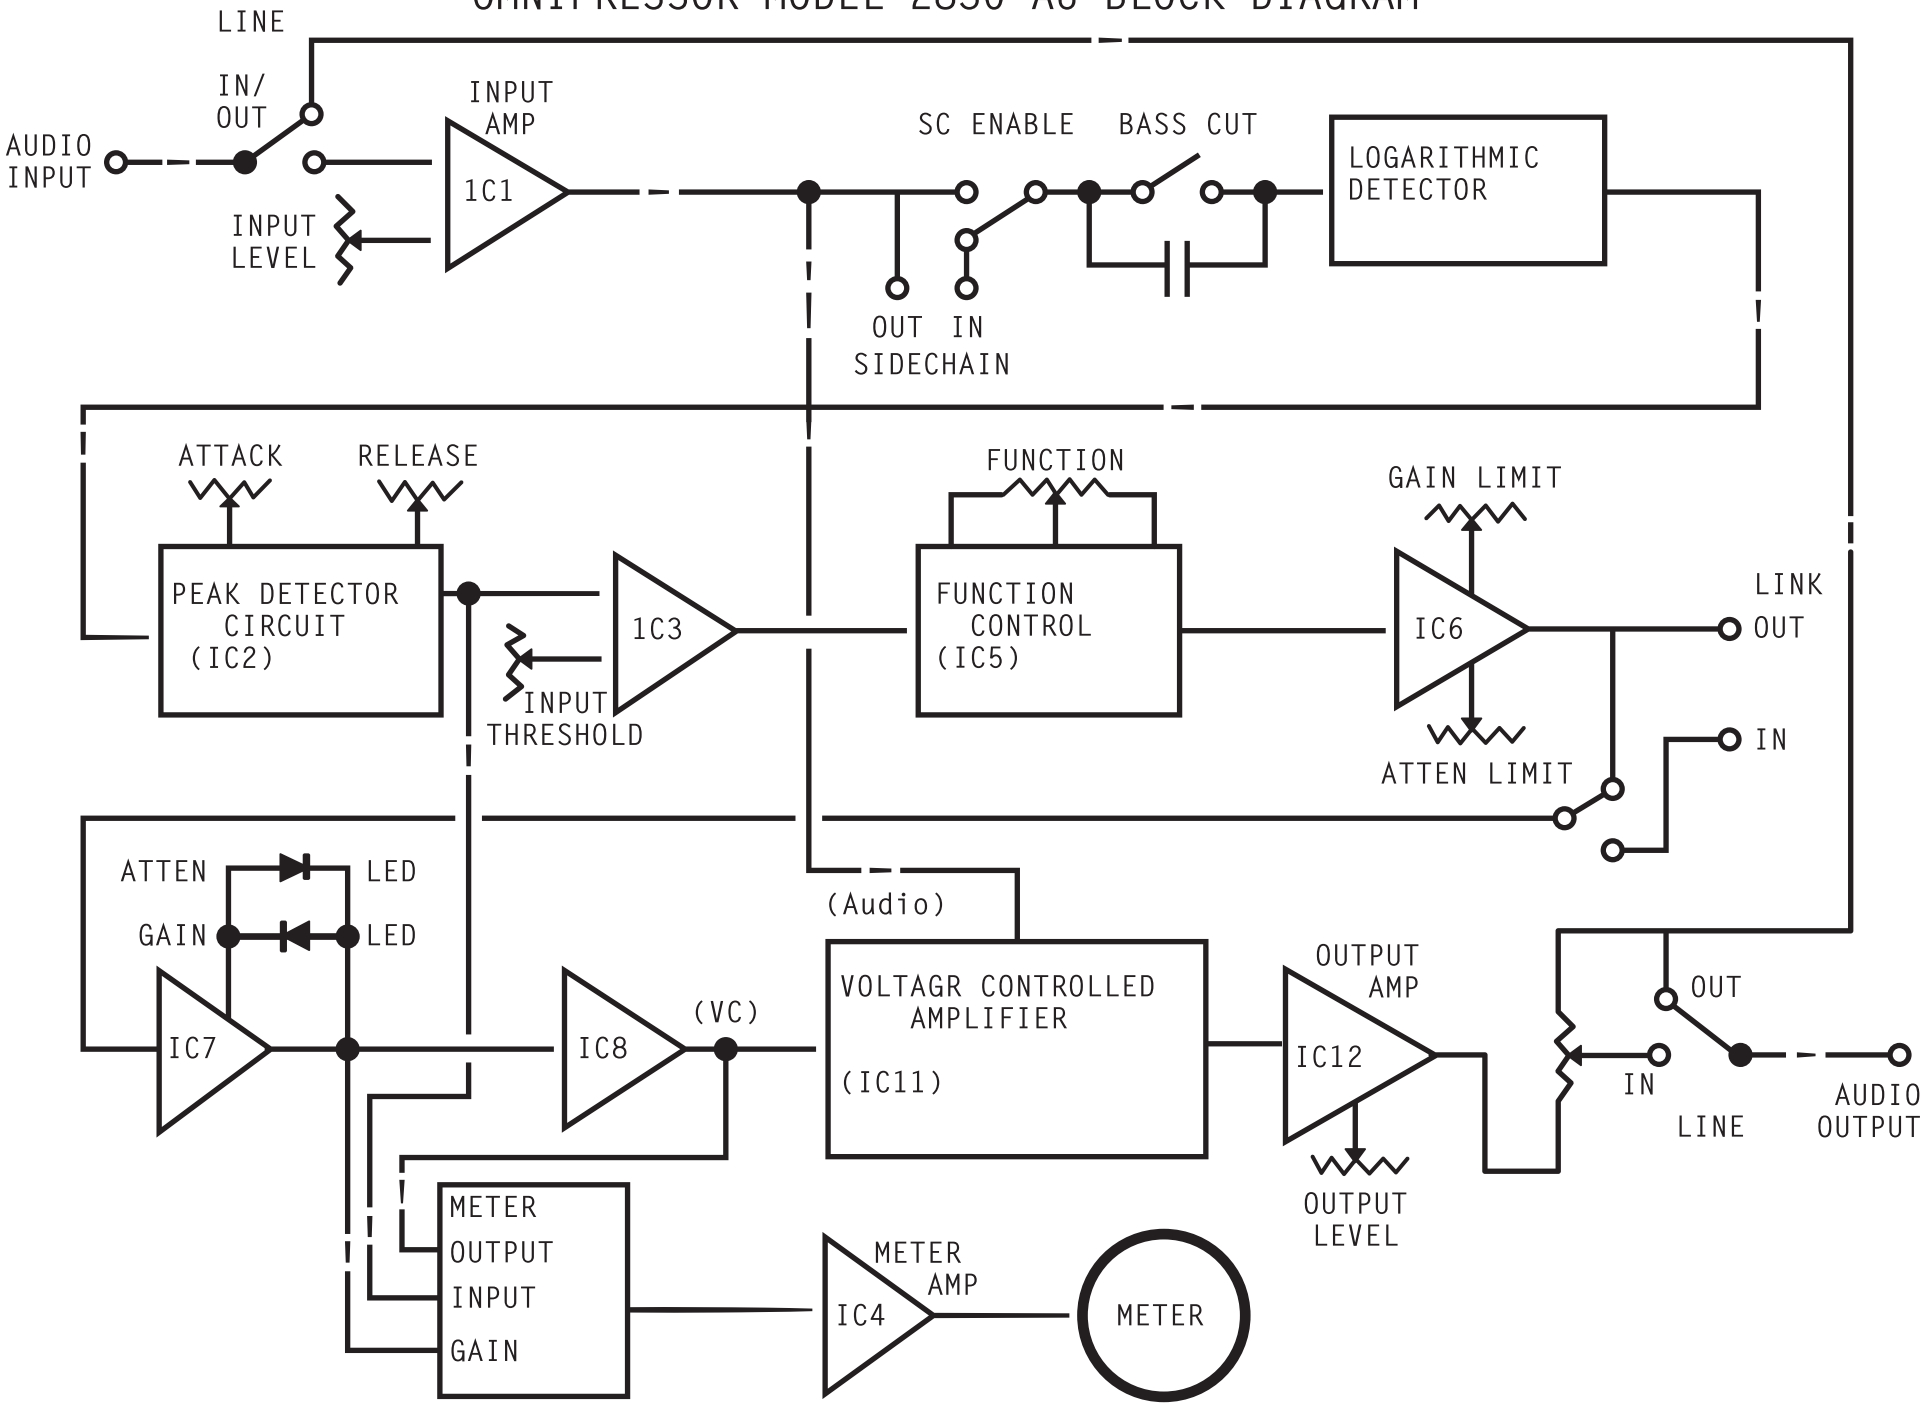

THEORY OF OPERATION

The unique features of the Omnipressor, Infinite Compression and Dynamic Reversal, are obtained by a process known as “open loop” operation. A standard, non-open loop compression amplifier operates as follows: the input signal goes through a gain control stage, after which the level is detected. If the output level is too high, a voltage is applied to the gain control stage to lower the output. Thus, the higher the compression ratio, the higher the gain of the amplifier necessary in the level detect or to control the output level. Obtaining extremely high compression requires extremely high gain, which requires critical circuitry and can cause instability. This standard type of operation is referred to as “closed loop” because the processed signal level is used to determine further changes in its own amplitude.

Open loop processing, as employed by the Omnipressor, uses a completely independent level detector and gain control stage. The level detector produces a DC output proportional to the AC RMS input. This voltage is linear with respect to the input level variation in decibels. An input change from −30 to −10dB produces the same DC change as does an input change from +10 to +30dB, even though the actual input change measured in absolute terms is much greater. Likewise, the gain control module gives a fixed dB change for a given control change in control voltage, regardless of whether the module gain is −30 or +30dB.

Now, consider what happens when an input signal is applied to both the gain control module and the level detector module. We apply a 0dB signal and note that the level detector output is +1 volt. (All the numbers in this example are chosen for simplicity. Actual values will be different.) Now, we apply a +10dB signal and note that the level detector output is +2 volts. Assuming that the gain control module works on the same levels (.1 volt per decibel), we can take the DC output from the level detector, apply it to an inverting amplifier, and thence to the gain control module. Depending upon the gain of the inverting amplifier, various compression ratios are available.

INVERTING AMPLIFIER GAIN	INPUT LEVEL CHANGE	OUTPUT LEVEL CHANGE	COMPRESSION RATIO
.5	10dB	5dB	2
.75	10dB	2.5dB	4
.90	10dB	1dB	10
.95	10dB	.5dB	20
.99	10dB	.1dB	100
1	10dB	0	infinite
1.5	10dB	−5dB	−2
4	10dB	−40dB	−.25

As can be seen, a wide variety of compression ratios can be obtained with no critical high-gain DC amplifiers. Implementation of the various Omnipression functions is achieved as follows:

The balanced or unbalanced audio input signal is transformer isolated and buffered. The buffered signal goes to the logarithmic amplifier via the BASS CUT switch, which inserts a series capacitor into the signal path in the CUT position. This capacitor, combined with the log detector's input impedance of 2.4K, forms a 200Hz bass cut filter. (Note that the audio path bass response is unaffected by this capacitor.)

The log detector uses a chain of limiting amplifiers, whose outputs are summed in a log IC whose output is a bipolar (AC) differential signal whose voltage varies at 60mv. A balanced modulator with differential input is used to amplify, level shift, and full-wave-rectify the log signal. The end of the limiting amp chain sends a zero-crossing signal to the carrier input of an op amp. This signal is diode limited. This enables the op amp to act as a synchronous rectifier, so that the succeeding detection circuitry will act on either positive or negative peaks. A differential amplifier comes next which buffers, amplifies, and level-shifts resulting in a 1 volt/decade signal with OV DC output for no input.

The output from this stage is peak detected by a high slew rate operational amplifier. The output charges a capacitor connected to a variable resistor which sets the attack time. The capacitor is discharged at a rate determined by circuitry that determines the release time. (Note that this circuitry enables attack times to be slower than decay times.)

Another op-amp inverts and level-shifts the detected signal so that its output is OV for inputs equal to the input threshold control setting. The input and output of this op-amp are applied to either end of the FUNCTION control. A variable gain and polarity signal is present on the wiper of the FUNCTION control with resistive loading resulting in a parabolic control. The ATTEN and GAIN LIMIT controls limit the amplifiers swing, corresponding to 0 to −30dB attenuation limit.

The buffered input audio is applied to the VCA module signal input. A DC offset trimpot nulls harmonic distortion in the VCA.

The meter circuit sums and offsets the various DC signals determined by the METER function switch. Trimpots set the gain and offset for each function.

SAFETY AND WARRANTY

SAFETY INFORMATION

Do not remove any covers or panels from the unit when the power is connected.

No operator access to the internals of the unit is permitted; servicing must be performed by qualified personnel only.

The unit must not be operated with a damaged or ungrounded power cord.

Suitable ventilation must be provided for the unit at all times. In particular, the side vents must not be obstructed. It is best if there is an inch or more clearance between the top of the Omnipressor and the bottom of the units above and below.

LIMITED WARRANTY

The Eventide Omnipressor Model 2830*Au unit covered by this warranty is built to exacting quality standards and should give years of trouble-free service. If you are experiencing problems which are not cleared up in this manual, your recourse is this warranty.

WHAT THE WARRANTY DOES AND DOES NOT COVER

Eventide Inc. warrants the above-identified unit to be free from defects in workmanship and material under normal operation and service for a period of one year from the date of purchase, as detailed below.

At our discretion within the warranty period, we may elect to repair or replace the defective unit. This means that if the unit fails under normal operation because of such defect, we will repair the defective unit at no charge for parts or labor. We also assume a limited responsibility for shipping charges, as detailed below.

The warranty does not extend beyond repair or replacement as stated herein and in no event will we be responsible for consequential or incidental damages caused by any defect, and such damages are specifically excluded from this warranty. Our sole obligation is to repair or replace the defective unit as described herein.

The warranty DOES NOT COVER any damage to the unit regardless of the cause of that damage. The unit is a complex piece of equipment that does not react well to being dropped, bounced, crushed, soaked or exposed to excessively high temperatures, voltages, electrostatic or electromagnetic fields. If the unit is damaged for these or similar causes, and the unit is deemed to be economically repairable, we will repair it and charge our normal rates.

The warranty DOES NOT COVER shipping damage, either to or from Eventide. If you receive a new unit from us in damaged condition, notify the carrier and us; we will arrange to file an insurance claim and either repair or exchange the unit.

If you receive a new unit from a dealer in damaged condition, notify the dealer and the carrier.

If we receive the unit from you with apparent shipping damage, we will notify you and the carrier. In this case, you must arrange to collect on any insurance held by you or your carrier. We will await your instructions as to how to proceed with the unit, but we will charge you for all repairs on damaged units.

WHO IS COVERED UNDER WARRANTY

The warranty applies to the original purchaser of a new unit from Eventide or an Authorized Eventide Dealer. Demo units are also covered by this warranty under slightly different circumstances (see below).

Units that are used, or have been used as part of a rental program, are not covered under any circumstances.

It is your responsibility to prove or to be able to prove that you have purchased the unit under circumstances which activate the warranty. A copy of your purchase invoice is normally necessary and sufficient for this.

If you have any questions about who is an Authorized Eventide Dealer, call us. Units with the serial number plate defaced or removed will not be serviced or covered by this warranty.

WHEN THE WARRANTY BECOMES EFFECTIVE

The one-year warranty period begins on the day the unit is purchased from an Authorized Eventide Dealer or, if the unit is drop-shipped from Eventide, on the day shipped, plus a reasonable allowance for shipping delays. This applies whether or not you return your warranty registration form.

WARRANTY INFORMATION

When we receive a unit, this is how we determine whether it is under warranty:

1. If the unit was shipped from our factory within the past calendar year, we assume that it is under warranty unless there is evidence to the contrary, such as its having been sold as used or rented, etc.

2. If the unit was shipped from our factory more than a calendar year ago, we assume it is not under warranty unless:

There is a warranty registration form on file showing that it has been purchased within the past year under appropriate conditions.

You send a copy of your purchase invoice indicating warranty status along with the unit.

3. If the unit was used as a demo, the warranty runs from the date that it was received by the dealer. The original purchaser gets the unexpired portion of that warranty.

When you send a unit for repair, you should indicate whether or not you believe it to be under warranty. If you do not say the unit is under warranty, we will charge you for the repair and we will not refund unless the charge was caused by an error on our part. If you believe the unit to be under warranty and you do say it is but we disagree, you will not incur any charges until the dispute is resolved.

Reading the above, you can see that it is to your advantage to send in the warranty registration form when you purchase the unit. If we know who you are, we can send you updates and notifications, and advise you of our new products. It will also enable you to receive pre-shipment of certain parts.

WHO PERFORMS WARRANTY WORK

The only company authorized to perform work under this warranty is Eventide Inc., Little Ferry, New Jersey. While you are free to give personal authorization to anyone else (or to work on it yourself), we will not honor claims for payment for parts or labor from you or from third parties.

However, we and our dealers do try to be helpful in various ways. Our dealers will assist, usually without charge during the warranty period, in:

Determining whether there is a problem requiring return to the factory.

Alleviating user error or interconnection problems that may be preventing the unit from operating to its full capability.

We are available for email and telephone consultation if the dealer is unable to assist.

If a part is found to be defective during the warranty period and you wish to replace it yourself, we will normally ship the part immediately at no charge, provided your warranty registration form is on file. We reserve the right to request that the defective part be returned to us.

SHIPPING WITHIN THE 50 UNITED STATES

You are responsible for getting the unit to our door at no cost to us. We cannot accept collect or COD shipments.

We will return the unit to you prepaid, at our expense, using an expeditious shipping method, normally United Parcel Service. In areas not served by UPS we will ship by US Mail.

If you are in a hurry and want us to use a premium shipping method (such as air express, next day air, etc.), be sure you tell us and agree to pay shipping charges collect. If you specify a method that does not permit collect or COD charges, remit sufficient funds to prepay shipping.

SHIPPING OUTSIDE THE 50 UNITED STATES

If you purchased the unit from a dealer in your country, consult with the dealer before returning the unit.

If you wish to return the unit to us, please note the following:

1. The unit must be prepaid to our door. This means that you are responsible for all shipping charges, including customs brokerage and duties. When a unit is shipped to us it must be cleared through United States Customs by an authorized broker. You must make arrangements for this to be done. Normally, your freight forwarder has a branch in the United States, which can handle this transaction. If you want our assistance, you must notify us before shipping the unit for repair, giving full details of the shipment, and including a minimum of $250.00 in US funds to cover the administrative and brokerage expenses. Any balance will be applied to the repair charges or refunded. If a balance is due to us, we will request a further prepayment.

2. All shipments will be returned to you collect. If this is impossible because of shipping regulations or money is due us, we will request prepayment from you for the appropriate amount.

3. All funds must be in US dollars. Payment may be made by check drawn on any bank in the US, or by telegraphic funds transfer to our bank. If you send US currency, be sure that it is sent by a method you can trace, such as registered mail. If you wish to pay by Letter of Credit, be sure that it affords sufficient time for work to be performed and the L/C negotiated, and that it is free from restrictive conditions and documentation requirements.

4. We reserve the right to substitute freight carriers. Although we will attempt to honor your request for a specific carrier, it is frequently necessary to select a substitute because of difficulties in communication or scheduling.

This warranty gives you specific legal rights and you may also have other rights, which vary from location to location.

Eventide®

OMNIPRESSOR®
2830⋆Au

EVENTIDE INC • ONE ALSAN WAY • LITTLE FERRY, NEW JERSEY 07643 • EVENTIDEAUDIO.COM